

Note: After valve is unlocked there are Two(2) pumps  
to be used to transfer Diesel back to vessel.  
Refer to page #22.

Fuel Transfer - Hose on rack with  
End in Drip Pan surrounding  
Transfer Pumps.

COMPANY CANAL  
Switches at Pumps

